


Integate Set (FG IG2, FG IG3, FG IG4)


INSTRUCTIONS

Installation

- 1 Wind wire around gate post a couple of times and loosely tie off. Run wires out to end strainer. Attach heavy duty gate handle strainer at the end strainer and hook onto thong.

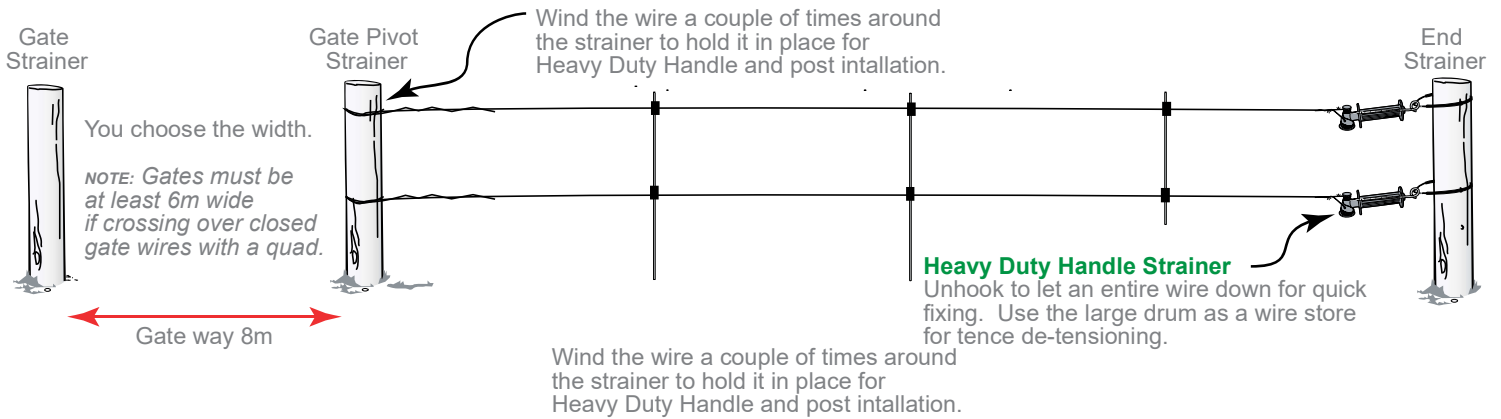

- 2 Install springs along the fence line. It is best to have them close to the gateway as this is considered a frictional zone because wire is held in place with a wooden post rather than a fibreglass post

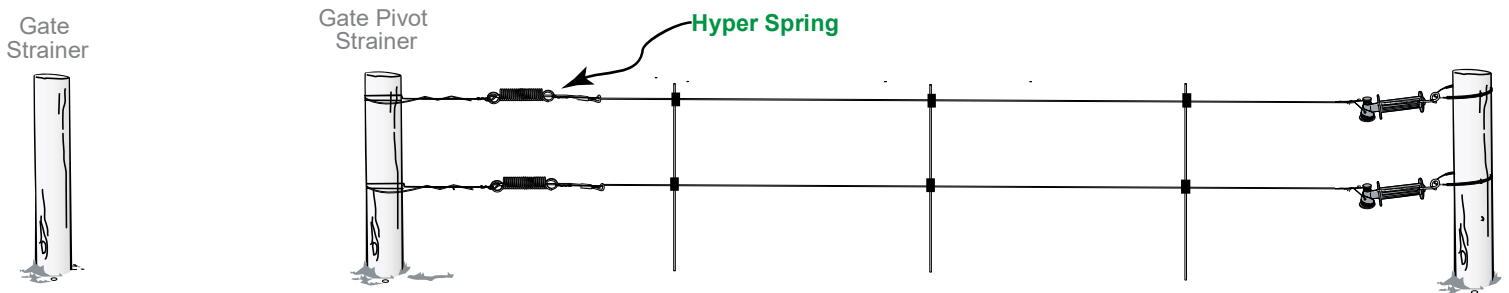

- 3 Install the isolators. Release the loosely tied wire at the Gate Pivot Strainer and thread through the isolator.

