

INSTRUCTIONS

Single Tread-in Assembly (FKS STRD)


Post Assembly

Assembly Techniques



Pedal and Pin

The fat end of the Single Wedge must be at the bottom.
Push the Wedge into the Pedal then place the post on a bench and whack the top of the Pedal near the wedge a couple of times to lock the Wedge firmly in place.
The amount of fibreglass post showing through is up to personal preference.
Generally, the normal setting has the fibreglass about 3-4cm shorter than the pin.

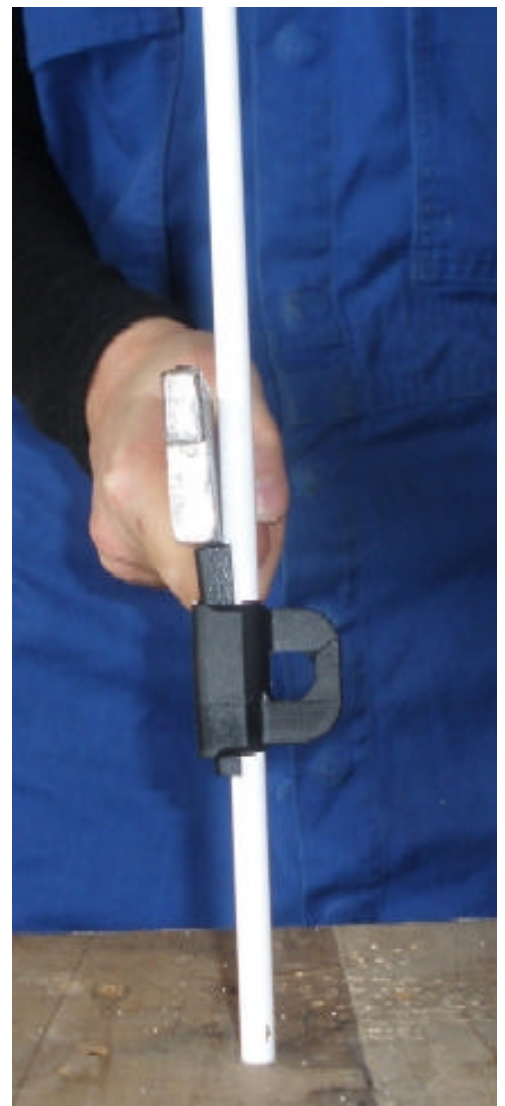

Wedge Clip

The lugs of the Wedge Clip Body should point in the opposite direction to the platform of the Pedal and Pin.

The fat part of the wedge should be at the top (not like the photo adjacent).

Push the Single Wedge firmly into the Wedge Clip Body. Place the post on a bench then whack the fat end of the Wedge a couple of times (driving it into the Wedge Clip Body).